

CROCHET - COLTELLI SINGER

47 W, 51 W, 52 W, 52 K,
104 W, 110 W, 136 W, 236 G, 236 U, 236 W



241 574 HSS



238 548



233 934



238 508



238 508 HSS



238 543



238 546



8061 A-3,1



249 191-3,1



249 191 HSS



263 735-3,1

71, 271 K




40048
Kl. 71-30




39609
Kl. 71-30



39867
Kl. 71-48/71-112

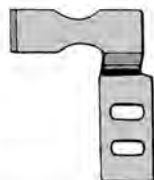

40035
271926

 

39608
Kl. 71-30

231-4 231-25 261-U

96, 451 K 11
245, 251



5730, 142032, 52131
5730 ³/₃₂
5730 ¹/₈
5730 ³/₁₆



147 211
276 489
(CT)



175085



175547

175, 375
Consew 260, 261



32820



32821



32823



32824 1/4 ant.



139433 post. 3/16-1/4



139434 ant. 3/16-1/4

246 K, 460, 990



164 550



CT 164 550



164 556



CT 164 556



164 233
164 552
164 728
CT = 164 813



139056 post. 3/16-1/4



139057 ant. 3/16-1/4





139288 medio 1/4




CT= Messer mit Hartmetall bestückt.
Knife tipped with tungsten carbide steel.
Cuchillas recargas de metal duro.

CROCHET - COLTELLI SINGER


246 K, 460, 990

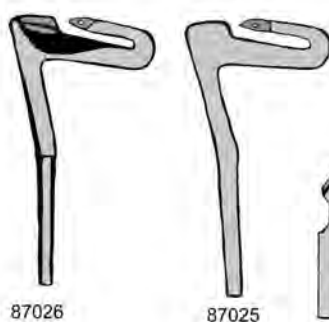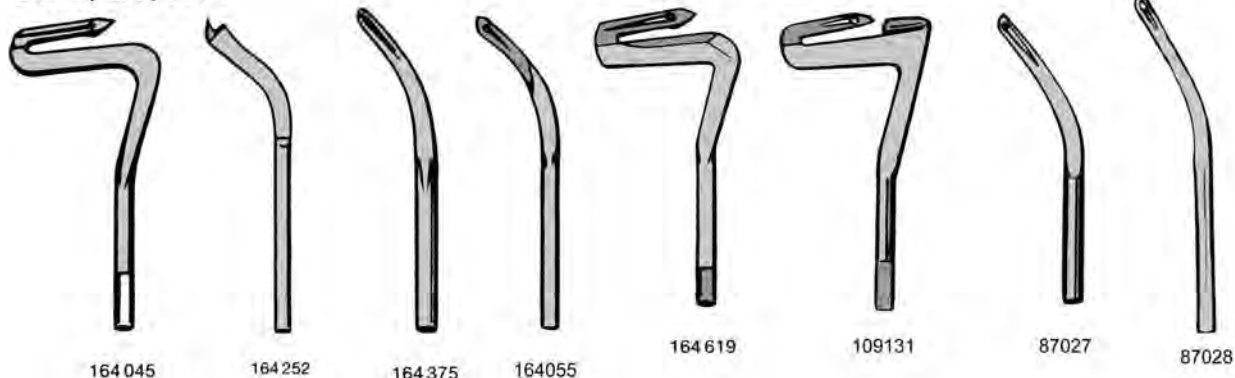

68, 69, 269 W, 270

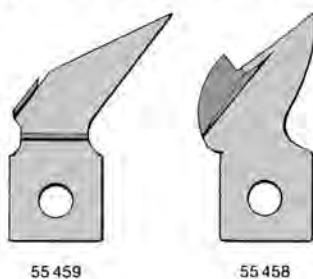

300 U, 300 W, 302 U, 320 W

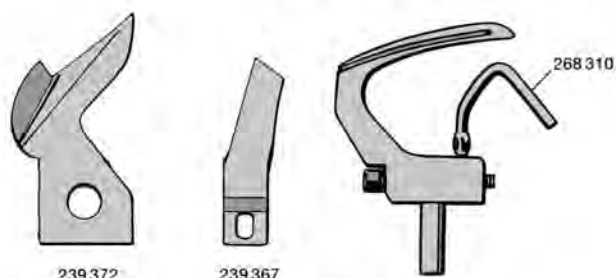


281

369


400 W 11

491 D, 591 D, 591 E, 601 D

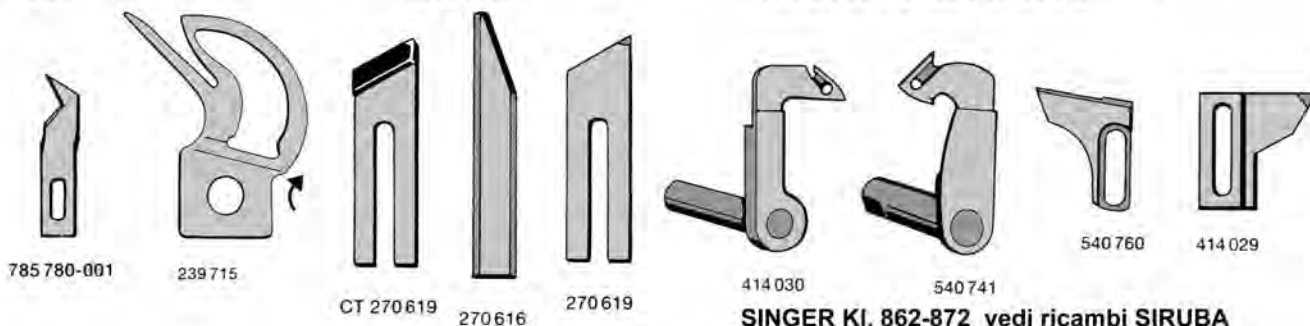

SINGER KI. 862-872 vedi ricambi SIRUBA

CROCHET- COLTELLI SIRUBA

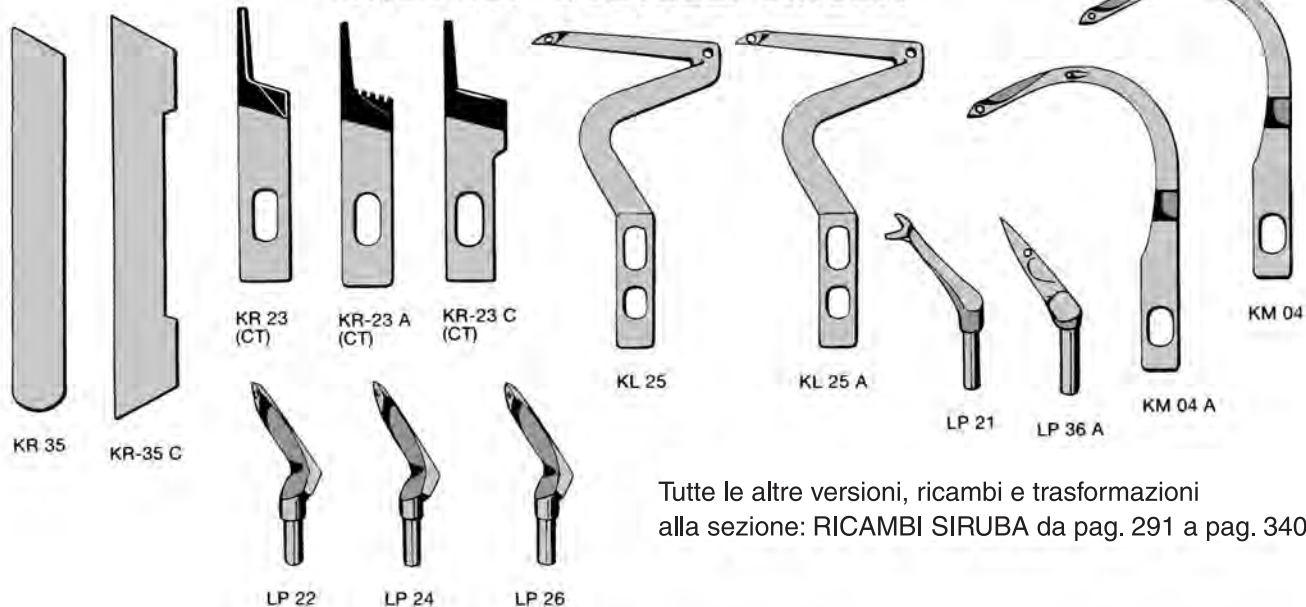

Tutte le altre versioni, ricambi e trasformazioni alla sezione: RICAMBI SIRUBA da pag. 291 a pag. 340