

CROCHET E CAPSULE

ADLER	CROCHET		CAPSULA		
MODELLO	NR.ORIGINALE	ART.	NR.ORIGINALE	ART.	con freno
199-289-489	199-15-281-4	A6021 senza capsula	089-00178-4	A7023	
1296	129-17-182-4	A6035 senza capsula	069-00578-4	A7026	A7027
69	069-00-581-4	A6042 senza capsula	069-00578-4	A7026	A7027
196-296-396	396-15-281-4	A6022 senza capsula	396-15-078-4	A7021	A7022
396 heavy	396-15-081-4	A6022H senza capsula	396-15-078-4	A7021	A7022
67-68 pelle	068-15-081-4	A6043 completo	068-15-080-4	A7025	
67-68 stoffa	068-15-082-4	A6045 completo	068-15-080-4	A7025	
167-168-267-268	167-00-181-4	A6046 completo	167-00-178-4	A7051	
167 rasafilo	167-15-020-4	A6044 completo			
91-98	098-15-007-4	A6047 senza capsula	241404-224441	A7050	
265	103123	A6048 completo	103118	A7052	
467-767 rasafilo	467-15-009-4	A6095 completo			
467 non rasafilo	467-15-0014	A6094 completo			
169-269 p.corta	169-00-181-4	A6096 senza capsula	167-00-178-4	A7051	
ALFA					
127-157	112329	A6009 senza capsula	211275	A7013	A7014
102-109-112-119	173239JP	A6008 senza capsula	112327(173058)	A7006	
1600-3000 serie	173239JP	A6008 senza capsula	2-11236		
184	145500	A6007	145507(10159)	A7028	
205	114213	A6010	1-14757(211275)	A7013	A7014
BROTHER					
B737 rasafilo	S02603-001	senza capsula	100369-148350	A7001	S03245
B755-B706	143342TS	senza capsula	100369-148350	A7001	S03245
B755-5 B706-5	111275-001	senza capsula	100369-148350	A7001	A7002
B706-3	116780-001	senza capsula	100369-148350	A7001	A7002
B760-5 B767-5	111272-001	senza capsula	100369-148350	A7001	A7002
B705-B707-B716	153131-001	senza capsula	100369-148350	A7001	A7002
B757-781-792-793	153131-001	senza capsula	100369-148350	A7001	A7002
B791-5 rasafilo	148846	senza capsula			S20553
B861-1 p.corta	117677-001	senza capsula	117596		
B814 B815-5	143986/141307	senza capsula	107097		
B815	159155	senza capsula	159157		
B852-853-854	158472	senza capsula	158471		
BAS310 a 701	S15663	senza capsula			S15903
BAS400	112041-001	senza capsula	117596		
B861-651-652	112041-001	senza capsula	117596		
B831-1-3	112691-001	senza capsula			
B841-5 B842-5	S07426-901	senza capsula			
B882	156514-901	senza capsula			
B835 rasafilo	150372	HSH12-15LCTR	151041		
B836	155466	HSH12-MC1	155476		
B837	150996-901	senza capsula			
B838	153912-901	senza capsula			
B842-3	S07425	senza capsula			
B845	S13613 / SA1681	HG12-15LC	S07741		
B845 rasafilo	S13614/S07568/SA1683	HG12-15LCTR1	S07742		
B847	S07425 / HG12-15L	versione con fermo			
B847 rasafilo	S07427 / HG12-15LTR1	versione con fermo			
B847	S07428 / HG12L 1	versione con capsula	S07740		
B847 rasafilo	S13612 / HG12L1TR1	versione con capsula	S07740		
B872	S09263 / HG12M (br)				
B872 rasafilo	S13615 / HG12MC1TR	versione con capsula	S09278		
B875	S13616 / HG12MC1	versione con capsula	S09279		
B875 rasafilo	S13615 / HG12MC1TR	versione con capsula	S09280		
430	152685		159610		159610MF
430 pesante	152687		159610		159610MF

CROCHET BLINDSTITCH / CROCHET - COLTELLI BROTHER

CROCHET BLINDSTITCH



36C22-1
COLUMBIA



36-16
LEWIS cl. 150
CONSEW cl. 221



A3239
US2200
22 (# 2200)
US-Rim 1099BL

MAIER
A3239M



A3240
V220111
UNITAS
cl. 221; 241;
251



A3241
223111
(# V252111)
UNITAS
cl. 232; 242;
252; 342; 352



A3242
401073
(# 400041)
SINGER
DEARBORN



A3243/187028
VLA 48-4
(# 187028)
STROBEL



A3243
187053
STROBEL



80413
YAMATO
cl. CM263; 268



110121-001
BROTHER
cl. B931; 932



11837 (# T830)
TREASURE
cl. BS800; 808; 810;



830; 860
MAUSER
cl. 68-16211; 68-17321



CROCHET - COLTELLI BROTHER

FD4-B 270 Series
B 2700 Series



S 08913-001



S 08934-001



S 09075-001



S 09080-001
(CT)



S 09094-001
(CT)



S 09093-001
(CT)



S 09101-001



S 12842-001



S 12865-001

B 281

altri ricambi BROTHER, nelle seguenti sezioni:
ricambi Brother da pag. 179 ~ placche e griffe Brother a pag. 152

CROCHET - COLTELLI BROTHER

**BAS 310, 311
BAS 430, 433**



S 102 05-001

 


S 10210-001

BAS 320, 322



S 02 375-001

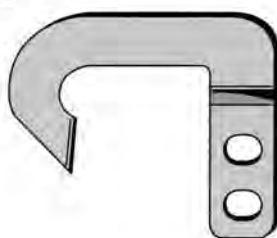

S 02374-001



**LK3-B 430, B 433, B 434, B 441
KE-430C-436C
KM-4300**



152905-00



152901-001




154176-001



152906-001

 DB2 - B 716

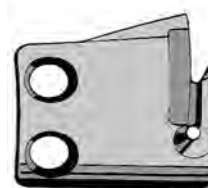

154575-001



154568-001

B 737, B 738



S 02 645-001



S 02 637-001

DBZ-B 755



142061-001



142058-001

**B 832, B 833, B 837
B 600
BAS 620**

 
 


159365-001



153019-001
= Eagle 21-4001

**B 814, B 815, B 816,
= Singer KI. 71**

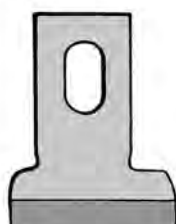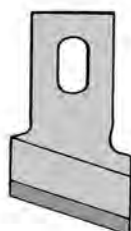

141543-001



141541-001

coltelli asole per: **NECCHI - SINGER - DURKOPP - BROTHER - JUKI**
A2350 normali **A2352** diritti per seta
A2350M versione **MAIER** **A2352M** versione **MAIER**
 (il modello diritto è compatibile **PFAFF**)

 
misure prodotte: da mm. 3,2 a mm. 38

CROCHET - COLTELLI BROTHER

B842 - B875



S 07526-001

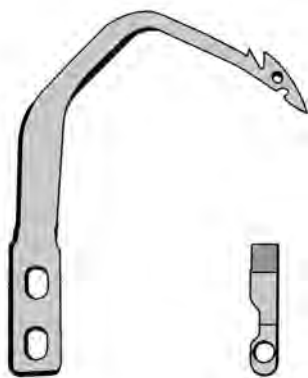

S 07526-201



S 07527-001

B 913; B 915; B 917



115069-001



S 03536-001

B 931, B 932



S 03627-001

B 926-6A



S 03629-001



148869-001



148870-001



148871-001



110121-001

serie B500 - B600 - B900



140567-001



CT 140567-001



140242-001



148815-001



148198-001



144074-001



1250014-299



118527-001



144077-001



CT 144077-001



112376-001



112436-001
155193-001




112436-001 BAK
Ceramic



CT 112436-001

 CROCHET - COLTELLI BROTHER

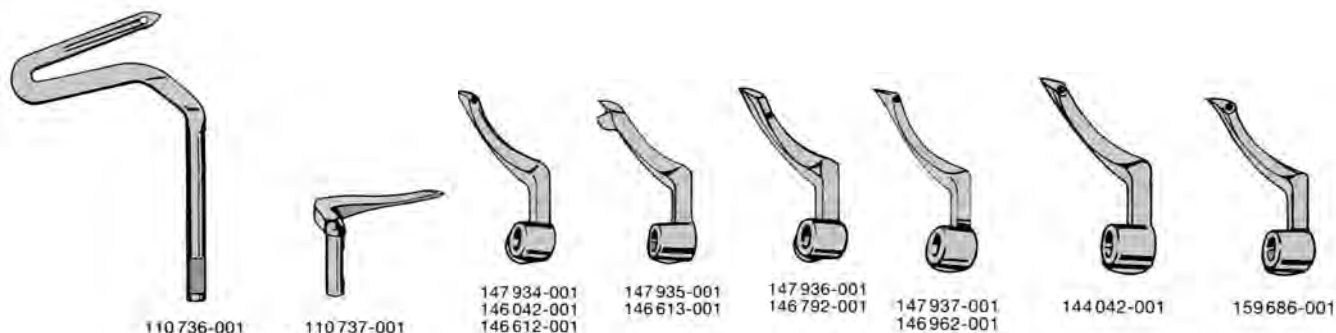

EF 4 -V 41, -V 51, -V 71, -V 72, -V 81, -V 82
MA 4 -V 61, -V 91, -V 92 -N 11, -N 21, -N 31

