

# PIEDINI SINGER



**241375**  
mm.3

**210564**

**210569**  
mm.5

**521Z**  
kl.107-457

**411314-4**

**411314**



**503736**

**503660**

**23705**  
(266125)

**241414**  
kl.107-457

**107CR**

**107CL**



**PFA1R**

**PFA1L**

**457SH**  
mm.2,5-3-4-5-6

**S457AT**  
guidanastro regolabile  
kl.107-457

**23771S**  
guidanastro regolabile mm.6-8-10-12



**107SCL**  
compens.zz.sinistro  
guida elastica  
kl.107-457

**107SCR**  
compens.zz.destro  
guida elastica

**MS112**  
applicazione fettucce ripiegate  
3/16 - 1/4  
kl.112-212

**S570REG**  
2 aghi con guida reg.  
3/16 - 1/4  
kl.112-212

**259635**  
2 aghi stretto  
1/8 - 3/16 - 1/4  
kl.112-212

# PIEDINI SINGER



<p><b>S570G</b> guidanastro reg.zz kl.107-457</p>	<p>pieдини per 2 aghi Singer-Brother-Juki <b>per la numerazione e misure vedi sezioni "Ricambi Singer" "Ricambi Brother" e "Ricambi Juki"</b></p>	<p><b>S570</b> piedino due aghi guida elastica destro <b>S570L</b> sinistro <b>S570DG</b> doppio distanza aghi:1/8-3/16-1/4-5/16-3/8-1/2 battuta guida: 1/32-1/16</p>	<p><b>S570C</b> 1/8-3/16-1/4-3/8</p>
---	---	---	--




<p><b>MT107</b> piedino teflon zz kl.107-457</p>	<p><b>MT112</b> piedino teflon 2 aghi da 1/8 a 1/2 kl.112-212</p>	<p><b>541566</b></p>	<p><b>541781</b> tipo per nervature piedini ZZ per Singer kl.20U</p>	<p><b>543939</b></p>
--	---	----------------------	--	----------------------



<p><b>139138</b> 3/16 - 1/4 kl.231-261</p>	<p><b>139223</b> 1/4 kl.231-261</p>	<p><b>139245</b> 3/16-1/4 kl.231-261</p>	<p><b>139405</b> 3 aghi in linea kl.231-261</p>	<p><b>148865</b> 3 aghi non in linea 1/4 kl.261 Singer e 926 Brother</p>
--	---	--	---	--

## TRASFORMAZIONE PER MACCHINA A BRACCIO ROVESCIATO

per Singer - Necchi - Brother

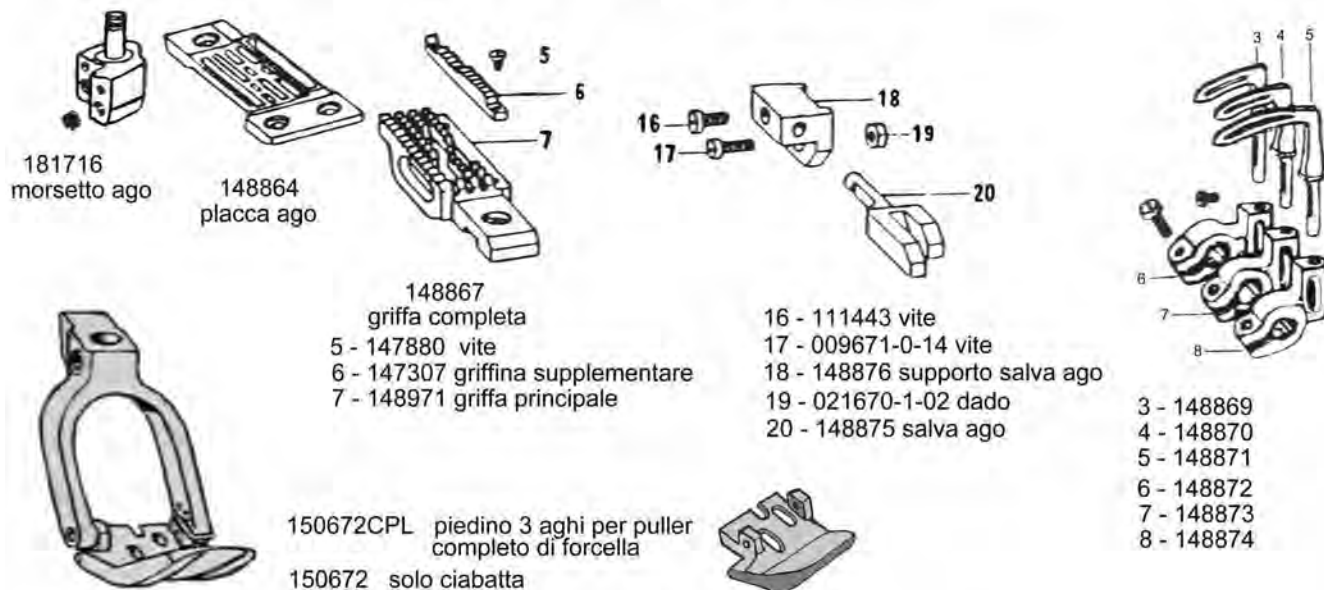

Per leggere: vedi ricambi Brother a pag 201